

Toxic smoke kills faster than fire, and our smoke masks and emergency escape hoods are designed to protect you long enough to escape and assist others.

Each device provides up to 60 minutes of effective protection with good air tightness and is engineered to filter carbon monoxide, hydrogen cyanide, toxic smoke and heat radiation.

HOW TO USE THE EVACULIFE SMOKE HOOD



**PROTECTS
AGAINST:**



Carbon Monoxide (CO)



Hydrogen Cyanide (HCN)



Toxic Smoke



Heat Radiation



FOLLOW THESE 6 EASY STEPS


1

Open the box and remove the escape hood.



2

Open the hood fully so the internal filter plug is accessible.

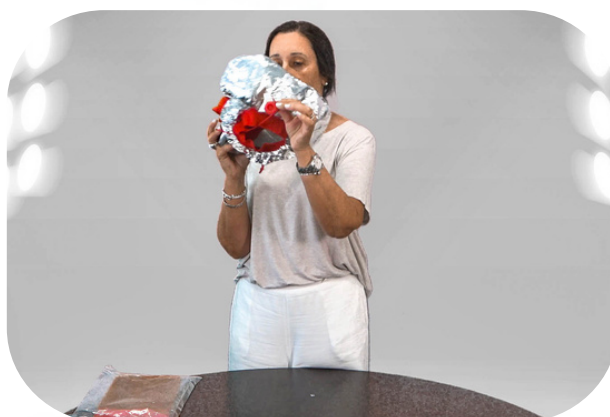

3

Remove the internal filter plug.



4

Remove the external filter plug.



5

Place the hood over the head, then cover the mouth and nose with the red silicone seal.



6

Pull the strap on the right side of the mask to ensure a firm fit.



PLEASE NOTE

These are single-use masks that must be disposed of after use.

